


Check union nuts for tightness on the valve and retighten if necessary. Engage the union nut lock on both sides in the grooves parallel to the pipeline and retighten if necessary.



Thread the fastening tape into the union nut lock. Hook the first hole of the fastening tape into the spigot on the lower side, thread the second hole of the fastening tape into the spigot on the upper side. Repeat installation of the fastening band on the second side.

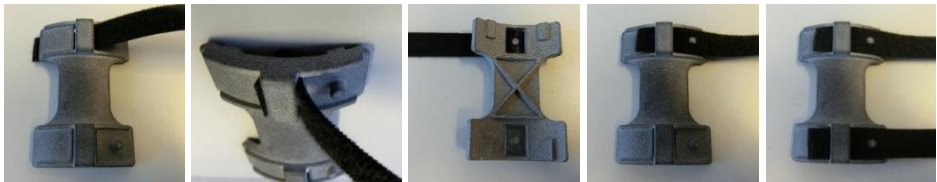

Place the union nut lock with the fastening straps on the ball valve and make sure that the union nut lock engages in the grooves of the union nuts.



Wrap the fastening tape under tension around the union nut and press the end on the Velcro fastener. Repeat fastening on second side.



Assembling video: [www.praher-plastics.com/de/videos/](http://www.praher-plastics.com/de/videos/)

This document does not constitute a guarantee, it is for initial information purpose only. The product range is continually upgraded, the designs and types therefore only reflect the state of the art at the time of printing. Subject to technical modifications!